

**INITIAL – COLD START**

VENUE SUPPLY ..... OFF  
MAIN SYSTEM DISTRO ..... OFF  
INCOMING FEEDER ..... CONNECT  
VENUE POWER / GENERATOR ..... ON  
VOLTAGE & FREQ ..... CHECK  
MAIN SYSTEM DISTRO ..... ON

**STAGE LEFT**

MAINS PRESENCE ..... CHECK  
UPS (IF USED) ..... ONLINE  
X-STAGE / SNAKE ..... CONNECTED  
LINUS POWER ..... ON  
STANDBY SWITCHES ..... DISENGAGE  
BACKLIGHTS ..... LIT  
AMPLIFIER IDs ..... UNIQUE  
PAN-T ..... ON  
AUX NET SWITCHES ..... ON  
LINET SWITCHES ..... ON  
NET CABLING ..... CHECK PATCH  
LINET CABLING ..... CHECK PATCH  
ANALOG BACKUP ..... CHECK PATCH  
F.P. ERROR MESSAGES ..... NONE  
COOLING ..... CONSIDER  
WEATHERPROOFING ..... CONSIDER  
FIRE LANES / EGRESS ..... CONSIDER

**STAGE RIGHT**

MAINS PRESENCE ..... CHECK  
UPS (IF USED) ..... ONLINE  
X-STAGE / SNAKE ..... CONNECTED  
LINUS POWER ..... ON  
STANDBY SWITCHES ..... DISENGAGE  
BACKLIGHTS ..... LIT  
AMPLIFIER IDs ..... UNIQUE  
PAN-T ..... ON  
AUX NET SWITCHES ..... ON  
LINET SWITCHES ..... ON  
NET CABLING ..... CHECK PATCH  
LINET CABLING ..... CHECK PATCH  
ANALOG BACKUP ..... CHECK PATCH  
F.P. ERROR MESSAGES ..... NONE  
COOLING ..... CONSIDER  
WEATHERPROOFING ..... CONSIDER  
FIRE LANES / EGRESS ..... CONSIDER

**AUXILIARY LOCATIONS**

STAGE RIGHT CHECKLIST ..... REPEAT

**FOH**

UPS (IF USED) ..... ONLINE  
NET SWITCH ..... ON  
LINET MASTER ..... ON  
COMPUTER IP ..... CORRECT  
NON RELATED APPLICATIONS ..... QUIT  
LINUS LIVE ..... LAUNCH

**CREATE NEW SYSTEM**

ARP TABLE ..... CLEAR  
ONLINE ..... PRESS  
UNIT SCANNING ..... OBSERVE  
ALL UNITS ..... GREEN  
ADD BUTTON ..... PRESS

**LOAD SYSTEM FROM FILE**

FILE \ OPEN ..... PRESS  
ONLINE ..... PRESS  
ALL UNITS ..... PRESENT  
MODULE SYNC FLAG ..... PRESS  
GROUP ASSIGNMENTS ..... CHECK

**RESTORE SYSTEM FROM NETWORK**

ONLINE ..... PRESS  
UNIT SCANNING ..... OBSERVE  
ALL UNITS ..... GREEN  
RESTORE BUTTON ..... PRESS  
MODULE SYNC FLAG ..... PRESS  
GROUP ASSIGNMENTS ..... CHECK

**PRE - TUNING**

GROUP ASSIGNMENTS ..... SET  
ARRAY VALUE ..... SET  
DISTANCE VALUES ..... SET  
GAINS / DELAYS / EQ ..... ZERO  
COPLANAR DELAY ..... CONSIDER  
PA SITE & TRIM ..... CHECK  
COVERAGE ..... CONFIRM  
SUB SENSOR WARNINGS ..... NONE  
LINET STATUS ..... CHECKED

**POST - TUNING**

FALLOVER / ANALOG BACKUP ..... TEST  
ARRAY LASERS ..... OFF  
HOIST POWER ..... OFF  
SYSTEM FILE ..... SAVE  
SYSTEM FILE BACKUP ..... SAVE  
SUBS / FILLS / STACKS ..... SECURE

**PRE - SHOW WALKAROUND**

F.P. ERROR MESSAGES ..... NONE  
LINET SWITCH LEDS ..... ON  
AMP LINET LEDS ..... ON  
COOLING ..... CHECKED  
WEATHERPROOFING ..... CHECKED

**POST SHOW**

AMP CHANNELS ..... MUTED  
SYSTEM FILE ..... SAVE